



GP344R User Guide

6864110B98-B

COMPUTER SOFTWARE COPYRIGHTS

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola.

Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

SAFETY

PRODUCT SAFETY AND RF EXPOSURE COMPLIANCE



Caution

Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

ATTENTION!

This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number **6864117B25**) to ensure compliance with RF energy exposure limits.

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following web site which lists approved accessories:

<http://www.motorola.comgovernmentandenterprise>

RADIO OVERVIEW

This user guide covers the operation of the GP344R Portable Radio.

Channel Selector
Knob

On/Off/Volume
Knob

Push-to-Talk (PTT)
Button

Side Button 1
(Programmable)

 
Side Button 2
(Programmable)

Top Button
(Programmable)

LED Indicator

Microphone

LED Screen

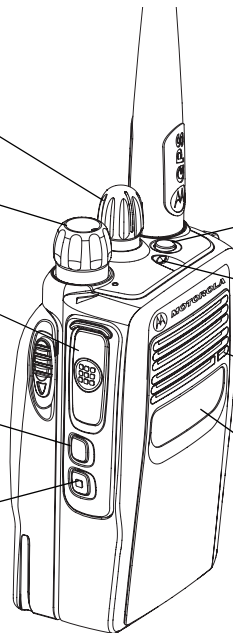

OPERATION AND CONTROL FUNCTIONS

Radio Controls

The numbers below refer to the illustrations on the inside front cover.

- 1. Channel Selector Knob**
Allow selection of up to 16 channels.
- 2. On-Off / Volume Knob**
Used to turn the radio on or off, and to adjust the radio's volume.
- 3. Push to Talk Button (PTT)**
Press and hold down this button to talk, release it to listen.
- 4. Side Button 1 (programmable)**
- 5. Side Button 2 (programmable)**
- 6. Top Button (programmable)**
Recommended for Emergency Button.

- 7. LED Indicator**
Green: Successful power up.
Green Blinking: Radio scanning.
Red: Radio transmitting.
Red Blinking: Channel busy - when receiving.
Yellow: Radio called.
Yellow Blinking: Radio call reminder alert.
Red Blinking: Low battery warning - when transmitting.
- 8. Microphone**
Speak clearly into the microphone when sending a message.
- 9. Antenna**
- 10. Accessory Connector**
Connects headsets, remote speaker/ microphones and other accessories. Replace attached dust cap when not in use.

Programmable Buttons


Several of your radio buttons can be programmed, by the Customer Programming Software (CPS), to activate the radio features. The following table shows the features that can be assigned to the Top button and the two Side Buttons.


Feature	Description
Monitor/Cancel	To monitor the selected channel for any activity or to cancel a current outgoing or incoming call.
Radio Call	To make an individual or group selective call.
Scan On/Off	To toggle between start and stop of the scan operation.
Nuisance Delete	To delete a nuisance channel while scanning.
Transmit Power	To toggle your radio's transmit power level between High and Low power.
Talkaround On/Off	To talk directly with another radio without going through a system or dispatcher.
Emergency	To activate the Emergency alarm call.
Lone Worker	To identify yourself as a lone worker. Radio enters emergency sequence unless you respond when prompted by pressing any radio button.

Feature	Description
Call Forward	To transfer calls automatically to another radio if you are unable to take the call.
Whisper	To increase the microphone gain to allow you to speak quietly.

Audio Signal Tones

High pitched tone  Low pitched tone 

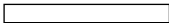
 Power Up - Radio self-test OK


 Power Up - Radio self-test Fail

 Button Error

 Force Monitor (PTT pressed)


 Feature Enable Side Buttons/ Top Button

 Feature Disable Side Buttons/ Top Button

 Channel Busy Tone/ Engaged

 Individual Call Alert

 Call Reminder

 Group Call Alert

 TOT Pre Alert

 Monitor Alert


 Call Failed

 Scan Start

 Scan Stop

 Priority Channel

 Priority Call detected

 H/W error - tone continues until valid operation.

 Lone Worker Reminder

 Low Battery

 Incoming Ringing Tone

 Outgoing Ringing Tone

 Channel Free Beep

 Incoming Emergency Alert

GETTING STARTED

BATTERY INFORMATION

Battery Care and Tips

This product is powered by a lithium-ion rechargeable battery.

The following battery tips will help you obtain the highest performance and longest cycle life from your Motorola rechargeable battery.

- Charge your new battery overnight (**14-16 hrs**) before using it to obtain maximum battery capacity and performance.
- Charging in non-Motorola equipment may lead to battery damage and void the battery warranty.
- When charging a battery that is attached to the radio, turn the radio off to ensure a full charge.
- The battery should be at about 25°C (room temperature) whenever possible. Charging a cold battery (below 10°C) may result in leakage of electrolyte and ultimately, in failure of the battery.
- Charging a hot battery (above 35°C) results in reduced discharge capacity, affecting the performance of the radio. Motorola rapid-rate battery chargers contain a temperature-sensing circuit to ensure that the battery is charged within these temperature limits.
- New batteries can be stored up to two years without significant cycle loss. Store new/unused batteries, at room temperature, in cool dry area.
- Batteries which have been in storage should be charged overnight.
- Do not return fully charged batteries to the charger for an “extra boost”. This action will **significantly** reduce cycle life.
- Do not leave your radio and battery in the charger when not charging. Continuous charging will shorten battery life. (Do not use your charger as a radio stand.)
- For optimum battery life and operation use only Motorola brand chargers. They were designed to operate as an integrated energy system.

Battery chargers will charge only the Motorola authorized batteries listed below; other batteries will not charge.

Table 2: IP54 Radio Battery List

Part No.	Description
JMNN4023_R	Slim Li-Ion, 1000 mAh, 7.5 V Battery (IP54)
JMNN4024_R	High Capacity Li-Ion, 1320 mAh, 7.5 V Battery (IP54)
JMNN4025_R	NiMH, 700 mAh, 7.5 V FM Approved Battery (IP54)
Do not use IP54 batteries with IP67 radio.	

Table 2: IP67 Radio Battery List

Part No.	Description
PMNN4073_	Li-Ion FM IP67 Standard Battery
PMNN4074_	Li-Ion Non-FM IP67 Standard Battery

Note: IP67 water submersible radios **MUST** be fitted with Motorola authorized IP67 batteries to ensure proper functionality.

Warning: When charging a IP67 battery, make sure that the IP67 battery (or IP67 battery with IP67 radio) is not wet prior to placing in the charger.

Warning: The battery charger is not waterproof. For your safety and proper operation of the charger, IP67 radios **MUST** be dry prior to placing in the battery charger for charging. Do **NOT** operate the charger, when your hands are wet or while holding a wet IP67 radio. Do **NOT** touch the battery contacts, when your hands are wet. Do **NOT** put the battery into water, as this may cause the IP67 metal contacts to corrode.

Battery Label



Recycling or Disposal of Batteries

Motorola endorses and encourages the recycling of all re-chargeable batteries. Contact your local Motorola dealer for further information.

Charging the Battery

If a battery is new, or its charge level is very low, you will need to charge the battery before you can use it in your radio.

Please contact your dealer for further information.

Note: Batteries are shipped uncharged from the factory. New batteries could prematurely indicate full charge, charge a new battery for 14-16 hrs before initial use.


Charger LED	Status
Red	Battery is charging
Green	Battery is fully charged
Blinking Red *	Battery is unchargeable
Blinking Yellow	Charger is getting ready to charge
Blinking Green	Battery is 90% charged

* Battery is damaged. Please contact your dealer.

1. Place the radio with the battery attached, or the battery alone, in the charger.
2. The charger's LED indicates the charging progress.


ACCESSORY INFORMATION

 Attaching the Battery

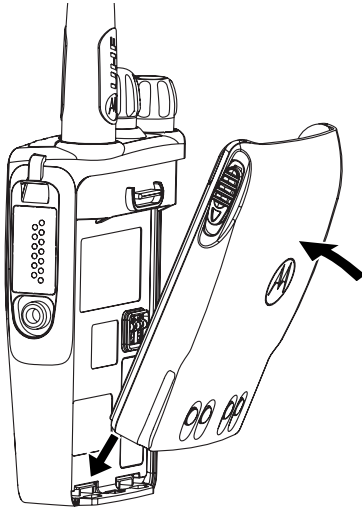


1. Fit the extensions at the bottom of the battery into the slots at the bottom of the radio's body.
2. Press the top part of the battery towards the radio until you hear a click.

 Removing the Battery

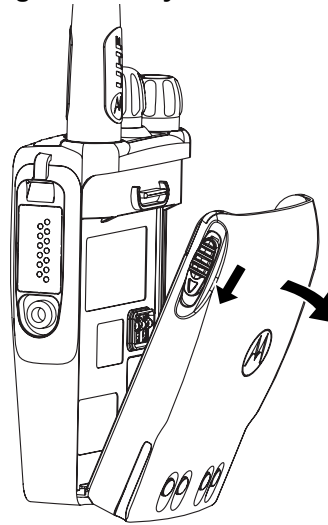


1. Turn off the radio, if it is turned on.
2. Slide the battery latches, on both sides of the battery, downwards.
3. Pull the top part of the battery away from the radio's body, and remove the battery.

 Attaching the Antenna

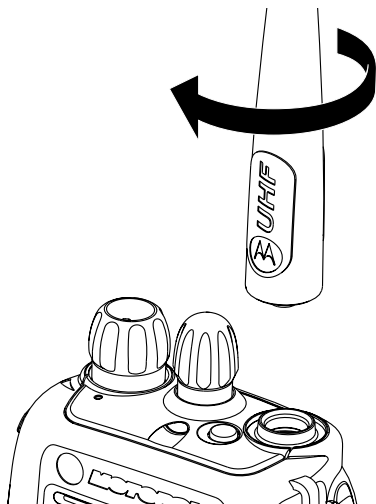


1. Align the threaded end of the antenna with the radio's antenna connector.
2. Turn the antenna clockwise to fasten it.

 Removing the Antenna

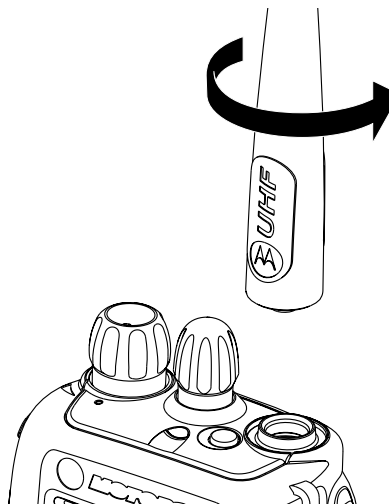

1. Turn the antenna counterclockwise until you can remove it.

 
DRAINING WATER FROM THE IP67 GP344R SPEAKER

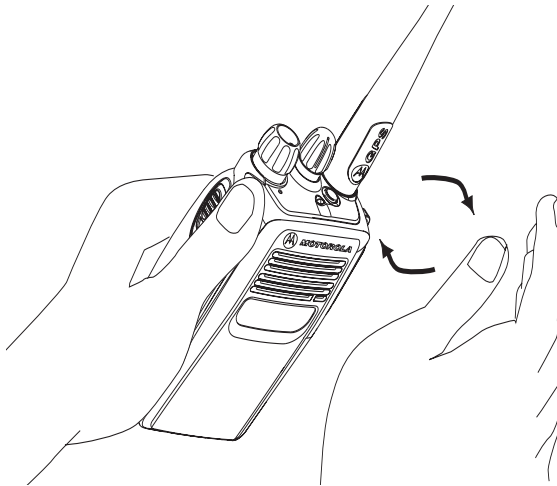

Note: If you accidentally drop your GP344R Plus radio into water, pick up the radio, and gently tap the radio (as shown above) to remove the water from the speaker grille and microphone port before using it.

Note: Do not submerge your radio for any longer than 30 minutes and no deeper than 1 metre. If these limits are exceeded then your radio could be permanently damaged.

 TURNING THE RADIO ON OR OFF

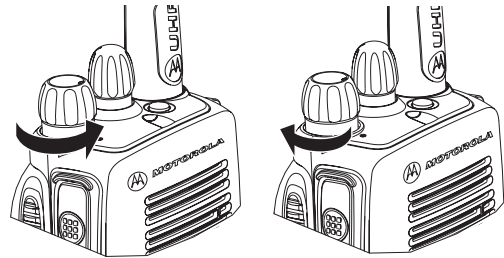

ON

OFF

- To turn the radio on, turn the **On-Off/Volume Control** knob clockwise.
- To turn the radio off, turn the **On-Off/Volume Control** knob counterclockwise until you hear a click.

ADJUSTING THE RADIO'S VOLUME

- Turn the **On-Off/Volume Control** knob to adjust the volume level.

SELECTING A RADIO CHANNEL

Your radio offers 16 channels, however some may not be programmed. Check with your dealer for more information.

- Turn the **Channel Selector** knob clockwise or counterclockwise until you reach the desired channel indicated on the selector graduation.

SENDING A CALL

1. Use the **Channel Selector** knob to change to the required channel.
2. Press the **PTT** button and speak clearly into the microphone. Your mouth should be about 2.5 - 5cm away from the microphone.
3. Release the **PTT** button when you finish speaking.

RECEIVING A CALL

1. Turn your radio on and adjust the volume level.
2. Switch to the desired channel.
3. If, at any time, a call is received, you will hear the call at the volume level you have set.

RADIO CALLS

SELECTIVE CALL

Making a Selective Call

You can make a selective call to a particular radio, known as an individual call, or to a selected group of radios, known as a group call.

To make a Selective Call :

1. Press the PTT or Call Button (depending on the way your radio has been programmed by your dealer), to set up the call.
2. Wait until the conversation has been set up, which means you are authorized to use the system.
3. Talk with your mouth 2.5 - 5cm from the microphone. Release PTT to listen.
4. When transmitting the red indicator will light continuously.

Your radio may be configured for 'Transmit Inhibit' under certain conditions (e.g. when the channel is in use by others) in which case, the channel busy tone will sound when you press

the PTT or call button to indicate that transmission is inhibited.

When the channel is free, the Channel Free beep _____will sound, and you can make a call.

If your radio is equipped with a transmit time out timer (TOT), a warning tone _____will sound a few seconds before the transmission is cut off. Your radio may be programmed to inhibit retransmission within a preset time.

Receiving a Selective Call

When you receive a selective call, you will hear either an individual call alert tone , or a group call alert tone _____ and the LED Indicator will light (yellow).

To answer the call:

1. Press the PTT button or Call button.
2. The call will terminate automatically when the conversation has ended or press the Monitor button.

EMERGENCY CALL

Your radio can be programmed to give you a one-button quick access to call a particular radio or centre (predefined by your dealer) in emergency situations. This is the *Emergency Call*.

When you make an Emergency call, your radio goes into an Emergency state, which can be programmed to:

- continually give audio feedback,
 - give no audio feedback; the radio can receive and transmit.
1. Press the **Emergency** button to initiate an Emergency call.
 2. Emergency can be stopped by:
 - Switching the radio **Off** and **On** again.
 - A **reset** message is received by your radio.
 - The emergency time duration is reached.

Note: The emergency time duration and reset message are programmed into your radio by your dealer.

Should you receive an Emergency call the incoming emergency alert tone will sound.

LONE WORKER

The Lone Worker feature enables you to work alone with added safety. To use this feature:

1. Press the **Lone Worker** button.
2. The feature enable alert will sound.

You will be reminded at intervals that **Lone Worker** is switched **on** by a high pitched alert being sounded.

- Press **any button** to respond and cancel the alert, if you do **not** the radio will enter the Emergency state.

To switch off this feature:

1. Press the **Lone Worker** button when the feature disable alert will sound
or,
2. Change the channel or,
3. Switch radio **off** and **on** again.

TALKAROUND

In your communications network, you may be using a system to cover a larger area than is possible with your radio. However, you can communicate with another radio within your radio's range without going through the system by using the *Talkaround* feature. This is especially useful when the system is down. To use this feature:

1. Press the **Talkaround** button to switch **on** talkaround when the feature enable alert _____ will sound.
2. Press the **Talkaround** button again to switch **off** talkaround when the feature disable alert _____ will sound.

FEATURES

The features described below are programmed into your radio by your dealer and are accessible via the radio's programmable buttons.

TRANSMIT POWER

You can transmit your calls at different transmit power levels. A higher level means you can reach a radio that is farther away. A lower power level conserves battery power. You are advised to transmit as frequently as possible on low power, and use high power only when needed. To use this feature:

1. Press the **Tx Power** button to switch to **high power** when the feature enable alert _____ will sound.
2. Press the **Tx Power** button again to switch to **low power** when the feature disable alert _____ will sound.

WHISPER

Whisper allows you to talk quietly into the radio microphone when making a call.

To switch Whisper on:

1. Press the Whisper button once, when the feature enable alert _____ will sound.

To switch Whisper off:

1. Press the Whisper button again, when the feature disable alert _____ will sound.

CALL FORWARD

You can call forward calls to your radio to another radio if you are unable to take calls or are away from your radio.

To enable Call Forward:

1. Press the Call Forward button once, when the feature enable alert _____ will sound.

To disable Call Forward:

1. Press the Call Forward button again, when the feature disable alert _____ will sound.

VOICE OPERATED TRANSMIT (VOX)

When the VOX headset/microphone is connected, your radio may be used with hands-free operation.

To start the VOX feature:

1. Connect the VOX headset onto the accessory connector of the radio.
2. Switch On the radio.

You can disable the VOX feature by pressing the PTT button on the radio. This allows you to use the VOX headset but you must press the radio PTT to transmit.

To re-enable the VOX feature:

1. Switch the OFF and ON again with the headset connected to the accessory connector
or,
2. Change channel with the VOX headset connected.

SCAN

You can monitor several channels in order to receive any call that is transmitted on any of these channels. Sixteen different channels can be programmed into each scan list. Each channel can share the same scan list or have different scan lists assigned to them.

Once the radio's scan operation is activated and the radio detects a call coming through a channel in its scan list, it switches to that channel for you to receive the call.

STARTING OR STOPPING SCAN

You can start or stop a scan operation by using the **Scan** button.

1. Press the **Scan** button to start scanning.
The scan start alert tone _____ will sound.
2. Press the **Scan** button again to stop scanning.
The scan stop alert tone _____ will sound.

The LED indicator will blink green during a scan operation; it will stop blinking when the radio switches to a channel.

TALKBACK

If the programmable Talkback option is set, you can respond to any calls received during the scan operation by pressing the PTT button before the programmed hang-time ends. Check with your dealer for details.

DELETING A NUISANCE CHANNEL

If a channel continually generates unwanted calls/noise (a “nuisance” channel), you can temporarily remove it from the scan list by performing a *Nuisance Channel Delete* operation:

1. While the radio is on the Nuisance Channel, press and hold the **Nuisance Delete/Cancel** button until you hear the scan start alert tone _____.
2. Release the **Nuisance Delete/Cancel** button.

Note: You cannot perform a Nuisance Channel Delete on a priority channel or if there is only one remaining channel in the scan list.

ADDING A DELETED NUISANCE CHANNEL BACK INTO THE SCAN LIST

1. Press the **Scan** button to stop scanning. The scan stop alert tone _____ will sound.
2. Press the **Scan** button again to re-start scanning. The scan start alert tone _____ will sound, and the scan list will contain all programmed channels.

All Rights Reserved.

Motorola Technology Sdn. Bhd. (Company No. 455657-H).

Plot 2, Bayan Lepas Technoplex Industrial Park,

Mukim 12, S.W.D.

11900 Penang, Malaysia.

Printed in Malaysia.

MOTOROLA and the Stylized M Logo are registered in the U.S. Patent and Trademark Office. All other product or service names are the property of their respective owners.

© 2006 by Motorola, Inc.

All rights reserved.



6864110B98-B